

The EcoBoost MINI is used as an accessory to the EcoBurner unit to improve efficiency.

Some assembly is required - The Spring Clip is attached to the bracket as illustrated below.

The EcoBoost MINI attaches to the Reflector Plate of the EcoBurner unit. The EcoBurner can then be used under chafing dishes as normal.

The shape of the bracket reduces reflected heat, keeping the fuel vessel cool which helps to improve efficiency.



Stage 1 Attaching the Spring Clip to the EcoBoost MINI

1.




Align the Spring Clip with the EcoBoost MINI as shown.

2.




Slide the closed end of the Spring Clip into the bracket central opening.

3.

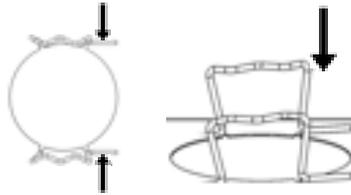

Squeeze the protruding open ends of the Spring Clip together and push these down into the central opening.

4.

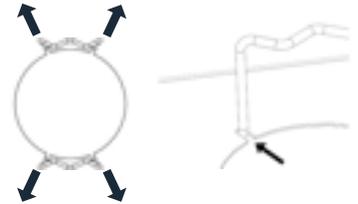

Ensure all four legs of the Spring Clip are held within the slots as shown.

Stage 3 Using the EcoBoost MINI with the EcoBurner


Attaching the disc to the EcoBurner:

1.



EcoBoost MINI with Spring Clip attached.

2.

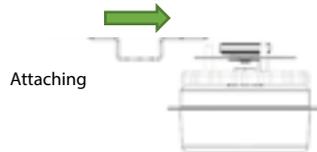

Align the bracket with the EcoBurner and push firmly, level and parallel to the base, forcing the spring arms apart.

3.



The EcoBurner reflector plate should sit on the Spring Clip arms and be held firmly in position.

Reflector plate should sit on the Spring Clip arms

Reflector plate should sit on the Spring Clip arms

Once the bracket has been attached to the EcoBurner, light using a stick lighter as normal and place under a chafing dish.

Allow sufficient time for the EcoBurner to cool down after use before handling.

The EcoBoost MINI should be removed after use as illustrated in step 4 to allow the EcoBurner to be refilled according to usual instructions.

After refilling the EcoBurner, The EcoBoost MINI can then be re-attached for next use.

4. The bracket can be removed by sliding in either direction.

Removing



Slide the EcoBurner out from the Spring Clip, level and parallel to the base.

Care Instructions

Cleaning the EcoBoost MINI

1. Wipe the EcoBoost MINI using a damp cloth.
2. The EcoBoost MINI can withstand typical dishwasher cycles.

Warnings & Troubleshooting

After use, the EcoBoost MINI will be **VERY HOT** and should be allowed to cool for 30 minutes before removal.

The chafing dish should never be used without ensuring there is water in the water pan. This will permanently damage the base of the chafing pan.

The EcoBoost MINI Spring Clip is removable and replaceable for future upgrades to the EcoBurner system. Replacement Spring Clips can be supplied by your local EcoBurner distributor.